

Delete fingerprint instructions

Delete ordinary users

1. Administrator presses finger pad for 10 seconds (ignore green light phase)



2. Red light comes on



3. With red light on, administrator presses finger pad



4. Solid red light confirms administrator fingerprint is accepted. Flashing red light means administrator must confirm again



5. Light flashes red-green-blue when fingerprint is successfully deleted



Delete ALL users

1. Administrator presses finger pad for 15 seconds (ignore green light phase)



2. Blue light comes on



3. With blue light on, administrator presses finger pad



4. Solid blue light confirms administrator fingerprint is accepted. Flashing blue light means administrator must confirm again



5. Light flashes red-green-blue when all fingerprints are successfully deleted



Precautions

- Water on the surface of fingerprint sensor area will increase power consumption, please wipe dry.
- Powered by rechargeable lithium battery, external Type-C charging interface. Charge time 1 hour.
- Lithium battery should be charged at least once every 3 months. Use standard USB or charge pack with a voltage of 5V.
- After 10 seconds of inactivity in the not set (locked) position, if the charging system is not in the dormant state, the user can press the fingerprint to return to the normal state.
- After 5 seconds of inactivity in the main function, the charging system will judge the current power if it is not in the charging system. If the battery is too low, the light flashes 3 times and must be charged.
- The standby time is about 1 year.

bROK Products LLC

2880 Gilchrist Rd.
Akron, OH 44305

brokproducts.com

Made in China

bROK

 **PRINTLOCK™**
SMART LOCK SECURITY



**EZ ACCESS
RECEIVER LOCK**

MODEL 57638

While entering and deleting fingerprints, if there is no fingerprint input, indicator light will shut off after 10 seconds and program will automatically exit.

- Personalized fingerprint security
- Up to 20 users, with 2 administrator users
- 360° fingerprint recognition
- Long battery life
- Waterproof and dustproof (IP55)



This receiver lock is charged via a Type-C data cable connected to a USB.

Please charge completely before the first use.

1st time (administrator) fingerprint entry instructions

- The fingerprint unlock function requires the user to successfully enter the fingerprint before it can be used normally.
- Anyone can unlock it if there is no entered user fingerprint.

1. Press fingerprint pad for 5 seconds until light stays solid green



2. When green light flashes, fingerprint collection starts



3. Register the same fingerprint 6 times, from different angles and positions



4. Press finger when light flashes green. When light stays solid green, repeat same fingerprint



5. Light flashes red-green-blue when all 6 of the same fingerprint is successfully collected



2nd to 20th fingerprint entry instructions

- By default, the 1st and 2nd fingerprints are the administrator fingerprints.
- Collecting the 2nd fingerprint requires authorization from the 1st administrator.
- Collecting the 3rd to 20th fingerprints may be authorized by either administrator.

1. Administrator presses fingerprint pad for 5 seconds until light stays solid green



2. When green light flashes, the user may start collecting fingerprints



3. User registers the same fingerprint 6 times, from different angles and positions



4. Press finger when light flashes green. When light stays solid green, repeat same fingerprint



5. Light flashes red-green-blue when all 6 of the same fingerprint is successfully collected

