



32900	Arched Ramps 90 inch smooth rung (Pair)
32901	Arched Folding 92 inch smooth rung Ramps (pair)
32902	Aluminum Trifold Ramp 69" – Platform Style
32920	Ramp Straight 12 x 69" Pair
32921	Ramp Straight 13 x 77" Pair

▲WARNING

Serious injury or death may result from the use of this product. Exercise extreme caution when using this product. Read, understand, follow and save these and all instructions before using product. Never allow anyone who is not familiar with these instruction to use this product.

- Read, understand, follow and save all instructions provided by the manufacturer of the product(s) that this ramp will be used with.
- Do not drive or ride any equipment up or down the loading ramp
- Do not exceed the capacity of your loading surface (i.e. tailgate, bumper). If unknown, consult the manufacturer to find load capacities.
- Do not exceed the rated capacity of the ramp.
- Straps must be secured tightly to minimize any movement of the ramp while loading or unloading. If loading from a vehicle/trailer, be sure the vehicle is parked with emergency brake engaged and/or wheels are chocked and engine is off. If loading or unloading from a trailer, also make sure the trailer is properly coupled to the tow vehicle.
- Never stand in the path of or directly behind equipment when loading/unloading with the ramp. Keep bystanders away from the ramps.
- This ramp must be used on a level and stable surface.
- Ramp surfaces may be slippery when wet or dirty.
- Do not use ramp sections as a ladder, bridge, scaffolding, or for any use other than loading/unloading equipment onto a trailer or pickup.
- Keep body parts completely clear of the hinge pin area at all times. Hinge area is a Pinch Point!
- Do not attempt to load or unload power equipment with its engine running.
- Do not leave ramps unattended when attached. Someone not knowing the intended use may misuse the ramps or move the ramps which may cause misalignment when returning to load/unload equipment.
- Never use ramp if there are any broken, bent or worn parts.
- Remove ramp from loading position before moving vehicle or trailer.



Serious injury to hand and body parts. The hinge area on ramps that fold is a PINCH POINT. Serious member damage can occur. Always keep body parts completely clear of any and all ramp hinges and hinge pin areas at all times.

⚠️WARNING

Serious injury or death may result from the use of this product. Exercise extreme caution when using this product. Read, understand, follow and save these and all instructions before using product. Never allow anyone who is not familiar with these instruction to use this product. Always use securing straps.

INSTRUCTIONS FOR USE

1. Do not exceed maximum height as shown in FIG 1.
2. Before each use check the strap for any fraying or excessive wear. Also check the welds on the back of the ramp for any visual damage. Do not use if damaged in any way.
3. Make sure the vehicle is parked with emergency brake engaged and/or wheels are chocked and engine is off to prevent any movement while loading/unloading. If loading/unloading from a trailer, also make sure the trailer is properly coupled to the tow vehicle.
4. Place top plate completely and firmly on top of the loading surface. Make sure the ramp is aligned with the wheels of the equipment being loaded. If 2 ramps are being used, make sure they are at the proper distance apart so that the tires of the equipment being loaded are centered on each of the ramps for the ENTIRE LENGTH of the ramp
5. Attach the strap from the underside of the ramp (**FIG 2**) to a structural member of the loading vehicle (i.e. hitch, bumper, frame) **FIG 1**. The strap should be attached on the center of the second or third ramp rung. When attaching the straps to the loading vehicle, make sure that straps are in line with the ramp section they are holding down (**FIG 2**). Straps must be secured tightly to the loading vehicle/trailer to limit any movement while loading or unloading.
6. With the engine off, carefully roll or winch equipment up or down ramp. Do Not Drive Or Ride Any Equipment Up Or Down Loading Ramp.

MAINTENANCE

- Periodically check the strap and the sewn connections on the strap for any fraying or excessive wear
- Make sure the strap cam lock is operating properly (dirt, etc. buildup may cause cam to work less effectively)
- Keep the ramp loading surface clean (free of dirt, oil, etc.) to continue to provide maximum traction.

⚠️CAUTION

The attachment or use of this product is critical and beyond the control of bROK Products LLC. bROK Products is not responsible for the use or attachment or installation. bROK Products neither guarantees nor will it be liable for any damage resulting from the attachment, use or misuse of the Ramps or assembled product. The liability of this product is limited to its purchased price if it proved to be the result of poor workmanship or defective material.

⚠️WARNING

Do not exceed 36 inches of height from the ground to loading surface as shown below in FIG 1.

FIG 1: Ramp use diagram

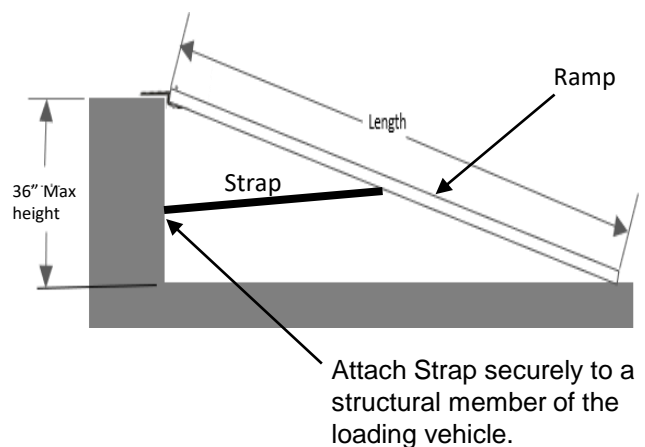


FIG 2: Strap Attached to Ramp

